

06.2010

DOLPHIN COUNTER MOUNTED SOAP DISPENSER – BENT SPOUT

- › Counter mounted polished chrome soap dispenser with bent spout
- › Usage: Low Traffic Areas
- › Finish: Polished chrome finish
- › Different codes for bottle types and top fill dispenser

DIAMETER	50 MM
HEIGHT	60 MM
PROJECTION	105 MM

SPECIFICATION

Liquid soap dispenser: Model number 06._____ in polished chrome with bent spout, tapered body. Manufactured by Dolphin Solutions Ltd.

MATERIAL

- › Body: Polished chrome plated brass
- › Spout and plunger: Polished chrome plated brass
- › Fixing stem: Black plastic with ½" bsp thread
- › Flanged back nut: White plastic
- › Soap bottle: 500ml capacity polypropylene bottle with dip tube (bottle supplied empty)

PRODUCT CODES

› Dispenser and 0.5 litre poly bottle	06.2010
› Dispenser for multi-feed system	06.4010
› Dispenser and 0.5 litre stainless steel bottle	06.5010
› Dispenser and 1 litre poly bottle	06.6010
› Top fill soap dispenser	06.2020

OPERATION

- › Press plunger head downwards to dispense liquid soap into palm of hand. Plunger and spout can rotate 360°. Each stroke delivers approximately 1ml of liquid soap per activation. Recommended for light to medium use areas. For high traffic areas see model number 06.4010 for use with 5.0L multi-feed system.
- › **Standard fill** soap dispensers are filled by unscrewing the bottle mounted under the countertop.
- › **Top fill soap** dispensers are filled by loosening the screw located in the rear of the body and removing the spout and plunger assembly.


Liquid Soap

- › We recommend using Dolphin solutions Ltd 'Pearlised' liquid soap (Product code 06.8305). We do not recommend using high viscosity liquid soaps or gels, which may impair function. Warning: Liquid soap with high sodium chloride content can cause corrosion and may invalidate the product warranty.

INSTALLATION

See diagram opposite

- › Prepare a Ø23mm mounting hole through worktop
- › Unscrew the soap bottle (6), adaptor cap (5) and locking nut (3) from the soap dispenser assembly (1) (Do not remove the dip tube (7))
- › Pass fixing stem (4) through mounting hole ensuring washer (2) is on worktop surface
- › Under the worktop, re-fit the locking nut and tighten
- › Re-fit the adaptor cap securely to the stem
- › Fill the soap bottle with a suitable liquid soap and carefully screw the bottle into the adaptor cap. The dip tube should reach the base of the soap bottle
- › Prime the soap dispenser by pumping the plunger head until liquid soap is dispensed from the nozzle

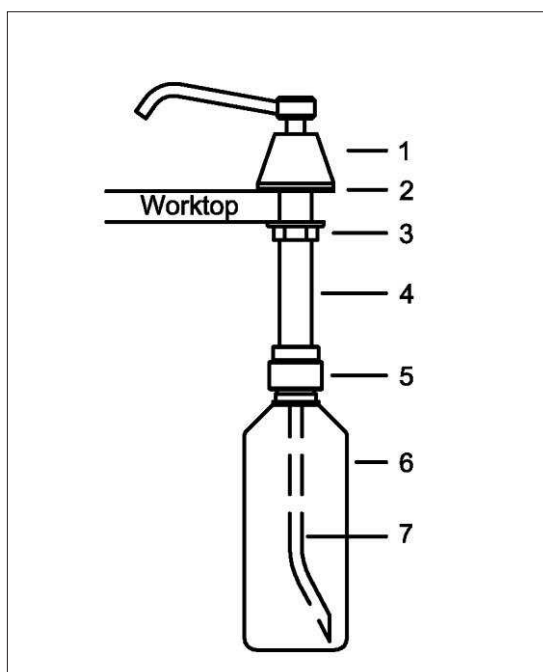

CARE AND MAINTENANCE

- › If the soap dispenser fails to function correctly, firstly check all connections are tight and free from air leaks. If dispenser still fails to function, empty the liquid soap from the bottle and re-fill with warm water. Pump the warm water through the dispenser to dislodge any dried soap residue and then re-fill the bottle with fresh liquid soap.
- › Water marks and soap residue on polished chrome surfaces are best cleaned using warm water and a mild detergent. Never use an abrasive cloth to remove stubborn stains. Dry with a soft clean cloth.

WARRANTY

This product is covered by a 12-month warranty from the date of purchase to be free from defects if installed and maintained in accordance with these instructions. Dolphin Solutions will replace or repair (as appropriate) free of charge any product with a proven manufacturing defect if reported within the warranty period.

Dolphin Solutions Ltd reserves the right to amend the design or dimensions without formal notice.